

OPERATING GUIDE FOR YOUR RP1054e KEYPAD

INTRODUCTION

CONGRATULATIONS!

...on your purchase of a Napco security system. Your new installation is a sophisticated warning system with many available features. Your alarm specialist will explain your system and show you how it works. Contact him should questions concerning operation arise.

These instructions contain important information about the operation of your system with the RP1054e Keypad. Read them careful-

ly and keep them handy for future reference. Check the Glossary for an explanation of terms that may be unfamiliar to you.

You'll probably find items mentioned here that do not apply to your system. Napco control panels have such a wide variety of features that few security systems, if any, will ever need them all. Your alarm professional has chosen appropriate features for your situation.

Your system has been carefully designed and engineered to the highest industry standards. To assure optimum safety and security, familiarize yourself with this equipment. Check its condition and state of readiness by testing it at least once a week in both the ac/battery and battery-only modes (ask your installer, how to make these tests).

The RP1054e has been investigated by UL only with the listed Napco MA1000e for residential applications.

TABLE OF CONTENTS

| Section | Page |
|---|------|
| GLOSSARY OF TERMS..... | 3 |
| KEYPAD CONTROLS & INDICATORS..... | 5 |
| HOLD-DOWN FUNCTIONS..... | 6 |
| SELECTING AND PROGRAMMING YOUR CODES..... | 7 |
| SETTING THE ALARM (ARMING) WHEN LEAVING..... | 8 |
| TURNING OFF THE ALARM (DISARMING) WHEN RETURNING..... | 9 |
| PROTECTING YOURSELF WHILE ON THE PREMISES..... | 10 |
| COMMUNICATOR FEATURES..... | 11 |
| FIRE PROTECTION..... | 12 |

REMEMBER:

TO SHUT OFF AN ALARM, ENTER YOUR CODE!

FIRE SIGNAL*: _____

BURGLARY SIGNAL*: _____

EXIT DELAY: _____

ENTRY DELAY: _____

FOR SERVICE: _____

CENTRAL STATION: _____

*FIRE HAS PRIORITY OVER BURGLARY

GLOSSARY OF TERMS

Note: Not all features are applicable to all systems.

Abort Delay. A delay period that allows the control panel to be reset, thereby aborting a report to a central station.

Ambush Code. A 2-digit code entered when forced to disarm. Sends a silent alarm to the central station.

Arm. To turn the system on by entering a User Code at the keypad.

Arm/Disarm Code. A personalized code for arming and disarming the system.

Battery. Backup power source in the control-panel enclosure to provide protection for at least four hours in the event of a power failure.

Bypass Button (Key [B/A] on keypad). Allows you to manually remove one or more zones from the system.

Central Station. Monitors incoming reports from your communicator and notifies the authorities of emergencies (optional).

Chime. A keypad beep alerting that the programmed zone has been opened. Chime

Zones may have been programmed to display when activated. Also see **Never-Arm Zone**.

Closing. A report sent to the central station when the system is armed (optional).

Communicator. Reports intrusions and emergencies directly to the central station over telephone lines.

Control Panel. The brain of the system, it controls all system functions.

Disarm. To turn the system off by entering a User Code at the keypad.

Exit/Entry Delay. A programmed time that lets you exit/enter your premises without setting off an alarm when the system is armed.

Instant Protection. Arming without entry delay while on the premises using Key [4].

Keypad. Puts control-panel functions at your fingertips. It can be mounted anywhere in your premises.

Opening. A report sent to the central station when the system is disarmed (optional).

Panic Buttons (optional). Key pairs on the keypad, **pressed at the same time** to alert

the central station of an emergency.

Report. A transmission to a central station specifying a change in system status (alarm, trouble, low battery, etc.) (optional).

Ringback. A beep after arming verifying central-station receipt of a closing report or Auxiliary panic alarm.

Service Code. A restricted Arm/Disarm Code intended for temporary use.

Sounder. A local warning device at the keypad to alert that (a) entry delay has started; (b) an attempt was made to arm with a zone in trouble; (c) Chime Zone or Day Zone activated; (d) a fire alarm or fire trouble condition exists; or, after a short delay, (e) the central station has acknowledged arming or receipt of an Aux panic alarm (both optional).

System Trouble. A problem within the system detected by the control panel and displayed at the keypad. These include such problems as ac power failure, low battery, communications failure, etc.

GLOSSARY OF TERMS

Trouble. An open door, window, or other problem on a zone that may prevent arming.

User Program Code. A code required to enter the Program Mode in order to program or change User Codes.

Watch Mode. Turns all Day Zones on or off by pressing Key [B/A] twice. (Optional.)

Zones. Independent circuits that protect specific areas of the premises:

- **Auto-Bypass Zone:** A zone that will automatically be bypassed from the system if in trouble (faulty) when the system is armed. (Not available in UL installations.)
- **Burglary Zone:** Detects intrusion.
- **Day Zone:** A zone programmed to cause visual and audible indication at the keypad when it is in trouble while disarmed. This feature is generally used to detect a problem, such as a break in a window foil, during the day. If a Day Zone is open, the green STATUS light will flash, the sounder

will pulse, and the numerical display will indicate the zone. Hold down Key [9] to silence the sounder and clear the display. Arm and disarm the panel to re-enable the Day Zone. (This feature may have been programmed so that Key [9] will turn off only the sounder; the display will continue to indicate the open zone until the zone is corrected, at which time the display will be cleared and the Day Zone re-enabled.)

- **Exit/Entry Zone:** Provides exit and entry delays to allow time to arm or disarm without causing an alarm.
- **Exit/Entry Follower Zone:** For interior zones. Ignores detection during exit delay; ignores detection during entry delay only if re-entry takes place through the normal exit/entry door.
- **Fire Zone:** A zone that provides audible and visual indication at the keypad in the event of a fire alarm or trouble condition. The Fire Zone is active 24 hours a day.

- **Group-Bypass Zones:** Circuits within the premises, usually including space-protection devices, interior doors, etc. (but not exterior doors or windows) that can all be bypassed simultaneously by pressing Key [B/A] twice. (Not for UL installations.)
- **Never-Arm Zone:** A zone that will remain disarmed when the rest of the system is armed. If Chime is programmed, the keypad will sound. This feature may be used as a driveway monitor, pool alert, etc.
- **Priority Zone:** A zone that prevents arming if in trouble.
- **Priority Zone with Bypass:** A Priority Zone that can be bypassed by pressing Reset Key [9] then entering your code.
- **Selective-Bypass Zone:** A zone that can be individually bypassed by pressing Key [B/A] followed by the zone number.
- **24-Hour Zone:** A zone that is "armed" at all times to respond to an emergency.

KEYPAD CONTROLS & INDICATORS

Digital Display

- Flashes Number – indicates which non-24-Hour Zones are in an alarm condition, and which Day Zones are in a trouble condition.
- Flashes Number (with flashing ARMED/ALARM, STATUS, and BYPASS lights) – System trouble: see **SETTING THE ALARM WHEN LEAVING**.
- Flashes "P" (with steady sounder) – indicates a priority condition: an attempt to arm (a) with a Priority Zone in trouble or (b) without resetting a Day Zone or a system trouble indication; enter code again.
- Displays one or more horizontal segments – **STOP!** Call for service.

ARMED/ALARM (Red) Light


- On – system is armed.
- Flashing – alarm on a non-24-Hour Zone (alarm memory).
- Flashing (rapidly) – instant protection; entry delay cancelled.

STATUS (Green) Light

- On – system disarmed, all non-24-Hour Zones okay.
- Flashing once per second – trouble on a non-24-Hour Zone.
- Flashing (rapidly) – trouble on Day Zone.

BYPASS (Yellow) Light

- On (with red or green light on or flashing) – one or more zones manually bypassed.
- On (with no other lights; with or without a

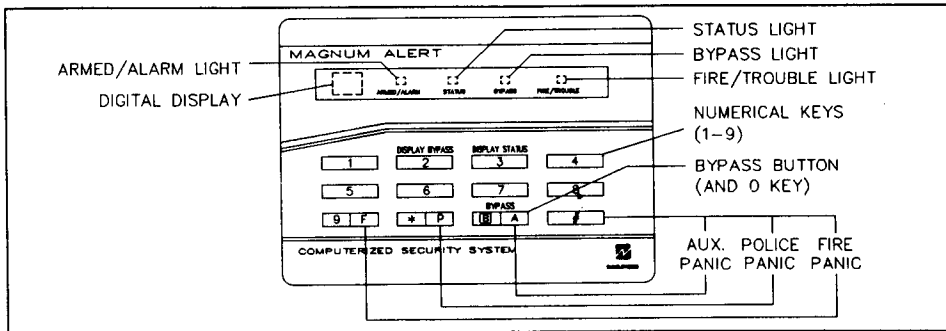

digit displayed) – **STOP!** Call for service.

First Three Lights

- Flashing (slowly, with number flashing) – System trouble: see **SETTING THE ALARM WHEN LEAVING**.
- Flashing (rapidly, with pulsing sounder) – User Program Mode; press [B] twice to exit.

FIRE/TROUBLE Light

- On – Fire Zone in alarm condition.
- Flashing – Fire Zone in trouble condition.

Keypad Sounder

- Steady Tone (with "P" displayed) – a priority condition exists. Enter code again to silence sounder.
- Steady tone (when entering) – entry delay in progress.

- Beep (of programmed duration) – Chime Zone tripped.
- Beep (2 seconds) – system armed with a zone in trouble.
- Pulsing – Day Zone trouble; Fire Zone trouble or alarm.
(To stop sounder "Trouble" warnings, hold down Key [9] for 2 seconds.)

BYPASS Button (Key [B/A])

To manually bypass a zone, press this button, then the digit representing the zone number. Refer to **SETTING THE ALARM WHEN LEAVING: Arming With A Zone In Trouble**.

PANIC Buttons (Fire/Police/Auxiliary)

Activate Panic alarms. See **PROTECTING YOURSELF WHILE ON THE PREMISES**.

HOLD-DOWN FUNCTIONS

To perform designated "Hold-Down" Functions, selected key must be held down for about 2 seconds, until sounder beeps. Note: Those functions identified by an asterisk (*) have secondary utility functions for installer's use only. Do not attempt to access these functions within 10 seconds after disarming.

Key [1]: TEST

Momentarily sounds the burglar alarm. If no alarm is heard, or if it is weak, call for service. Make this test weekly. (To test, hold down Key [1] until alarm sounds.)

Key [2]: DISPLAY BYPASS

Numerically displays all zones that have been bypassed using Key [B/A]. To check zones bypassed, hold down Key [2] until the function beep sounds, and continue to hold it down until all zones have been displayed.

Key [3]: DISPLAY STATUS

Numerically displays all zones that are in "trouble". To check status, hold down Key [3] until the function beep sounds and all zones have been displayed.

Key [4]: INSTANT PROTECTION*

Cancels entry delay when armed (the delay will be restored when you disarm). To cancel entry delay, hold down Key [4] (just before or

after arming) until the function beep sounds.

Key [5]: CHIME* (Chime Zone(s): _____)

This will enable a feature that sounds a "chime" (beep) at the keypad each time a programmed zone is opened. The Chime Mode functions when the alarm system is disarmed (off), but it will always operate on a Never-Arm Zone (see GLOSSARY). To disable the chime feature, hold down Key [5] again (until function beep sounds).

Key [6]: TELCO TEST*

(Optional; Enabled? YES NO)

Pressing the key tests your phone lines (the sounder will start to pulse). If the line is good, the pulsing will stop; if not, a steady tone will sound. (To test, hold down Key [6] until sounder beeps.) Reset the sounder using Key [9]. Call for service, if necessary.

Key [7]: FAULT FIND

For installer's use only; holding down Reset Key [9] or arming the panel will cancel the Fault-Find Mode.

Key [8]: PROGRAM

(Alarm functions are disabled while in the Program Mode.) Allows you to enter the Program Mode, where you can program up to 8 User Codes (up to 7 in the MA1008e), includ-

ing a Service Code. Refer to **SELECTING AND PROGRAMMING YOUR CODES** for more information. (To enter the Program Mode, hold down Key [8] until function beep sounds, then enter your Program Code.)

Key [9]: RESET

Resets any sounder indication, system-trouble indication, Day-Zone indication (may be programmed to reset Day-Zone condition), and Fault-Find Mode; bypasses a Priority Zone with Bypass. After an alarm occurs and the system is disarmed, the numerical display will still indicate which non-24-Hour Zone(s) caused the alarm. Key [9] will clear the display. (To reset any condition, hold down Key [9] until function beep sounds.)

Key [B/A]: ALARM HISTORY

Alarm memory will flash the red ARMED/ALARM light and display the zone(s) violated to indicate an alarm condition. The alarm condition is not lost when the system is rearmed; the last alarm will remain in Alarm History until automatically reset by a new alarm condition. To check alarm history, hold down Key [B/A] until the function beep sounds, and continue to hold it down until all information has been displayed.

SELECTING AND PROGRAMMING YOUR CODES

Note: While programming, fire/burglar alarm functions are disabled.

User (Arm/Disarm) Codes

You can choose up to 8 different four-digit codes (7 in the MA1008e) that will allow you to arm and disarm your system. Any of these codes can easily be changed or removed should it become necessary in the future to deny a user access to the premises. Your security system cannot be disarmed by unauthorized persons. It will respond only when a code of your choosing is entered at the keypad.

Service Code

Your alarm specialist may have programmed User 5's code as a **Service Code**, a temporary code intended for occasional use only, thus allowing guests, babysitters, service employees, etc. limited access to the system. When no longer needed, the code is disabled.

The Service Code is controlled by User 1. Whenever User 1's Code is entered, the Ser-

vice Code is disabled, and it remains disabled until the panel is once again armed using the Service Code. (The Service Code can always be used to arm and, in fact, can be programmed as an **arm-only** code by your installer.)

Selecting Your Codes

After your alarm specialist installs your system, he will give you a "User Program Code" and show you how to program your User Codes. For optimum security, do not select obvious combinations, such as consecutive numbers (1,2,3,4), repetitive numbers (2,2,2,2), your street or telephone number, birth date, etc., for any user code. A code of at least three digits is required in UL installations.

1. Hold down Key [8] until the function beep sounds. This puts the system into the User Program Mode.

2. Enter your **Program Code** into the keypad; the first three lights will flash and sounder will pulse. Programming your **User Codes** is as easy as a, b, c:

- a. Press Key [B/A].
 - b. Enter the user number "1" through "8" ("1" through "7" in the MA1008e). (Enter "5" for the Service Code.)
 - c. Enter a code of up to four-digits (digits 1-9 only).
3. To end the programming mode, press Key [B/A] **twice**.

Examples: Program User Codes 1, 2 and Service Code.

- Press [B/A] + [1] + up to four digits = User 1's Code
 - Press [B/A] + [2] + up to four digits = User 2's Code
 - Press [B/A] + [5] + up to four digits = Service Code
- (Then press Key [B/A] **twice** to exit.)

You do not have to assign all codes. Use as many as you need and change them as necessary.

To erase any code(s), repeat steps 1, 2a, and 2b. For example, to erase User 3, press [B/A] + [3] (do not enter the four-digit code).

SETTING THE ALARM (ARMING) WHEN LEAVING

Arming Before You Leave

Check the green STATUS light on the keypad. If it is on, enter your code. The red ARMED/ALARM light will come on and the green light will go off. If your system was programmed for an audible test on arming, the alarm will sound briefly shortly after arming. **Note:** It is possible to arm your system with a bad or disconnected battery.

Leave immediately through the exit/entry door before your exit time runs out. If you wait too long, the keypad sounder will warn that your exit time has elapsed and entry delay has started. To avoid causing an alarm, quickly return to the keypad and enter your code to reset the control panel. You may then arm the system again.

Arming with a Zone in Trouble

A flashing green STATUS light indicates that at least one zone is in trouble, that is, the zone is in an "open" or "shorted" condition. If a Day Zone is in trouble, the zone will also display numerically and the sounder will be pulsing. Any zone in "trouble" can be displayed numerically by holding down Key [3] until the function beep sounds. Try to fix the zone by closing windows or doors that may be open. If a Day Zone is in trouble, reset the Day-Zone indication by arming and disarming or, if so programmed, by holding down Key [9] until

the beep sounds. (Reset the Day Zone by correcting the condition, then arming and disarming.) If no zones are in trouble, the green light will come on, indicating that the system is ready to be armed.

If a zone cannot be fixed immediately, it may still be possible to arm without the protection of that zone. Check your Alarm Plan (see instructions furnished with control panel). If **Auto-Bypass** was programmed for the zone in trouble (not for UL installations), simply arm your system. A short beep will sound at the keypad, indicating that a zone has been auto-bypassed, that is, it has been removed from the system and cannot cause an alarm.

If the zone is programmed for **Selective Bypass**, pressing Key [B/A] and then the number of the zone will manually bypass that zone. (**Caution:** Temporary users should never be shown how to bypass a zone.)

Group-Bypass Zones are a group of zones that can all be manually bypassed simultaneously by simply pressing Key [B/A] twice. See **PROTECTING YOURSELF WHILE ON THE PREMISES: Bypassing Interior Zones.**

You will not be able to arm your system if (a) a zone selected as a Priority Zone is in trouble; (b) a Day-Zone numerical display indication is still flashing; or (c) a system trouble numerical display is flashing with the first three keypad lights. If you attempt to arm, the sounder will come on and a "P" will be displayed. Enter your code again. The "P" must be cleared by fixing or bypassing the zone in trouble. Priority Zones must be corrected before the system can be armed. Zones selected for Priority with Bypass may be bypassed by holding down Key [9] before arming. **Be sure to have all zones in trouble fixed as soon as possible.**

SYSTEM TROUBLES

Check your keypad before you attempt to arm. A number flashing together with the ARMED/ALARM, STATUS, and BYPASS lights will alert you of a problem in the system, as indicated below. If you must arm in this condition, hold down Key [9] until the function beep sounds to temporarily reset the keypad, then test the system by holding down Key [1]. If the alarm sounds, arm the system, however be sure to have the problem corrected as soon as possible. If the alarm does not sound or is weak call your alarm specialist. **TEST YOUR SYSTEM WEEKLY!**

- "1" (Power Failure). Check for an area power outage. Also check that the panel's power transformer is plugged in.
- "2" (Low Battery). Hold down Key [9] to clear the display, then hold down Key [1] to initiate a Bell/Battery Test. If the low-battery display returns, the battery may need replacement. Call for service. Note: If arming with a low-battery indication (not in all models), backup power may not be

- present in the event of a power failure.
- "3" (Failure to Communicate). (Displayed with steady sounder.) Hold down Key [9] to reset the keypad, then hold down Key [8] to test the phone lines. If the indication returns, call for service. (A successful communication will clear the system trouble display.)
- ANY OTHER NUMBER – Call your alarm professional.

TURNING OFF THE ALARM (DISARMING) WHEN RETURNING

Disarming When You Return

When you enter through the exit/entry door, the sounder will come on for the entry period. Disarm the panel quickly using your code.

Note: If you enter the wrong code, you must wait at least 2 seconds before trying again. (If, upon entering, the red ARMED/ALARM light is flashing, leave the premises and call authorities from a neighbor's telephone.)

If there has been an alarm on a non-24-Hour

Zone, the ARMED/ALARM light will be flashing and the zone number will be displayed, even after you disarm. To reset the display, note the number, then hold down Key [9].

When the system is disarmed, the red ARMED/ALARM light will go off and the green light will come on (or flash if a zone is in trouble).

If an alarm occurred on a 24-Hour Zone, there will be no indication at the keypad, how-

ever an alarm will be recorded in Alarm History (see **Key [B/A]: Bypass/Alarm History**).

Ambush Code

If an intruder forces you to disarm your system, enter your programmed one- or two-digit Ambush Code before your Arm/Disarm Code. This activates the Ambush feature, which will send a silent alarm to a central station. (Ambush is an optional feature.)

PROTECTING YOURSELF WHILE ON THE PREMISES

Arming with Zones Bypassed

Your alarm specialist may have programmed one or more zones for **Selective Bypass**, that is, they may be removable from the system. Since a bypassed zone cannot cause an alarm, you may wish to use this feature to turn off the interior areas while armed and keep your perimeter zones (windows, doors, etc.) active.

Press the bypass button (Key [B/A]), then the number of the zone you wish to bypass. (To verify which zones have been bypassed, hold down Key [2].) Check the green STATUS light to be sure that no zone is in trouble, then enter your arming code to arm.

Bypassing Interior Zones

Your installer may have also selected all interior zones to be **Group Bypass Zones** (not for UL installations). Bypass these zones all at the same time by simply pressing Key [B/A] **twice**. The yellow BYPASS light will come on whenever you bypass one or more zones. Enter your code to arm remaining zones; the green light will go off and the red ARMED/ALARM light will come on. The yellow light will go off the next time you disarm, indicating that the bypassed zones are no longer bypassed. (The BYPASS light does not come on when zones are auto-bypassed (unless programmed otherwise by your alarm specialist.) To review which zones have been bypassed, hold down Key [2] until all bypassed zones have been displayed.


Arming with Instant Protection

Holding down Key [4] (until beep sounds) just before or after arming will cancel the entry delay on the exit/entry zones. The red ARMED/ALARM light will flash rapidly to indicate this condition. If someone enters through an Exit/Entry Zone, an alarm will sound immediately.

Panic Alarm

(Fire Panic Enabled? YES NO)
(Police Panic Enabled? YES NO)
(Auxiliary Panic Enabled? YES NO)

- To activate a Fire Panic alarm, press Keys [9/F] and [#] at the same time.
- To activate a Police Panic alarm, simultaneously press Keys [* / P] and [#].

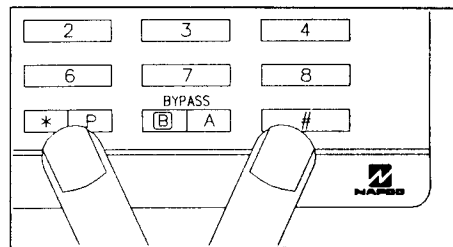

These features may have been programmed to send an alarm to a central station, activate an audible alarm, or both.

- To activate an Auxiliary Panic alarm, press Keys [B/A] and [#] simultaneously.

This feature is usually a **report-only** panic, acknowledged by the central station with a "ringback" at the keypad.

CENTRAL-STATION MONITORING

Your alarm specialist may have programmed your system to be monitored by a central station. The built-in digital communicator can transmit emergency signals and status reports to the central station 24 hours a day.

COMMUNICATOR FEATURES

Abort Delay. Note which of your zones have **Abort Delay**, a delay that allows you time to reset the system, thus aborting a report to the central station.

- Regular Burglary (Non-24-Hour) Zone reports are aborted by disarming within the delay period.
- 24-Hour Zones and zones programmed to report restores must be repaired first, then the panel armed and disarmed, all within the delay period.

Opening and Closing Reporting. Notifies the central station every time the system is disarmed and armed. Each of up to four users opening or closing can be identified by his code.


Telephone-Line Test (Programmed Option). To check your telephone connection with the central station hold down Key [6]. After the beep sounds, a pulse tone will be heard from the keypad sounder. If the phone line is good the sound will stop in a few seconds. If not, a continuous tone will sound.

The keypad sounder can be silenced by pressing Key [9].

Your alarm specialist may have also programmed your system to automatically send a test signal to the central station every

24 hours.

Central-Station Ringback (Programmed Option). The central station will acknowledge arming of the system by ringing back with a short beep from the keypad sounder.

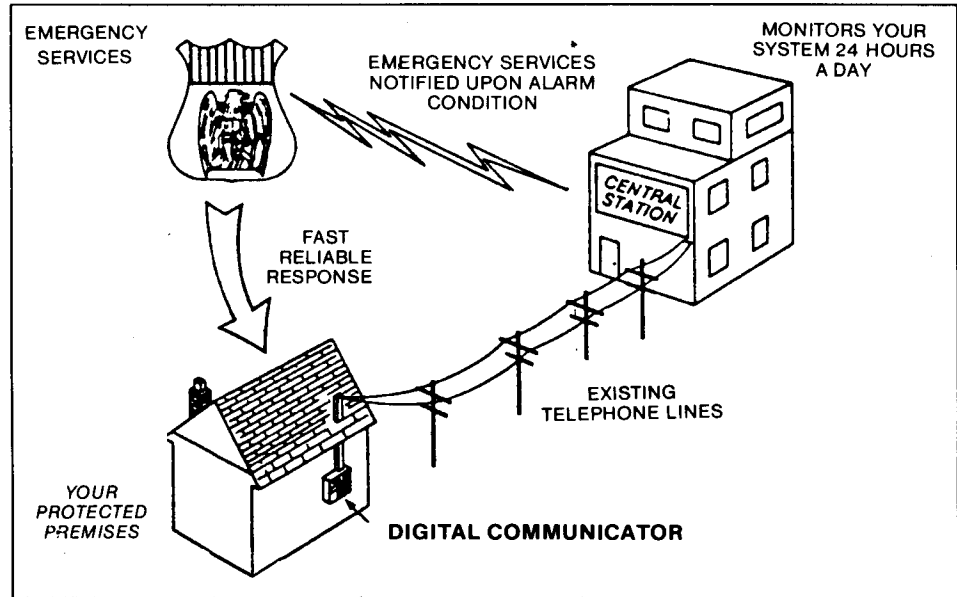

FIRE PROTECTION

The following information is applicable only where local ordinance permits use of your alarm control panel for fire detection. Refer to the instructions furnished with the control panel for important information on how to prepare an evacuation plan.

Controlling Your Fire Circuit

If your system includes smoke detectors or heat-sensing thermostats, you have 24-hour fire protection. The control panel will constantly monitor this zone for any alarm or trouble condition.

Fire-Zone Alarm

An alarm on the Fire Zone will cause the red FIRE/TROUBLE light to come on and the

sounder to pulse. The fire alarm will sound, overriding any other alarm.

Fire-Zone Trouble

If there is trouble on the fire circuit, the red FIRE/TROUBLE light will flash and the sounder will pulse after a 10-second delay. To silence the sounder, hold down Key [9]. The light will continue to flash to indicate the trouble. After the trouble is repaired, hold down Key [9] again until the beep sounds; the keypad will reset after a brief delay and the light will go off.

Resetting After an Alarm

The fire alarm may be reset by holding down Key [9] for 2 seconds, then arming and

disarming or, if so programmed, by waiting for it to automatically shut off. The sounder and the FIRE/TROUBLE light will stay on. Hold down Key [9] to silence the sounder. The red FIRE/TROUBLE light should go off in about 30 seconds. If smoke has not cleared from a smoke detector, or a thermostat has not cooled, the red FIRE/TROUBLE light will remain on. Hold down Key [9] every 30 seconds or so until the condition has cleared and the light goes off.

Escape Planning

For escape planning, refer to Napco User's Guide OI146, provided with your control panel.

Napco Security Systems, Inc.
333 Bayview Avenue
Amityville, New York 11701